

JHM02 Square Drive Wrench Torque Chart

Pressure (Bar)	Torque (Nm)	Pressure (Bar)	Torque (Nm)
70	164	390	974
80	187	400	1000
90	211	410	1026
100	234	420	1052
110	258	430	1077
120	282	440	1103
130	305	450	1129
140	329	460	1154
150	353	470	1180
160	378	480	1205
170	402	490	1231
180	427	500	1256
190	451	510	1282
200	476	520	1308
210	503	530	1333
220	530	540	1359
230	558	550	1385
240	585	560	1411
250	612	570	1437
260	638	580	1462
270	664	590	1488
280	690	600	1514
290	716	610	1539
300	742	620	1564
310	768	630	1590
320	793	640	1615
330	819	650	1640
340	844	660	1664
350	870	670	1688
360	896	680	1712
370	922	690	1736
380	948	700	1760

JHM05 Square Drive Wrench Torque Chart

Pressure (Bar)	Torque (Nm)	Pressure (Bar)	Torque (Nm)
70	433	390	2414
80	495	400	2475
90	557	410	2537
100	619	420	2599
110	681	430	2661
120	743	440	2723
130	805	450	2785
140	866	460	2847
150	928	470	2909
160	990	480	2971
170	1052	490	3032
180	1114	500	3094
190	1176	510	3156
200	1238	520	3218
210	1300	530	3280
220	1361	540	3342
230	1423	550	3404
240	1485	560	3466
250	1547	570	3527
260	1609	580	3589
270	1671	590	3651
280	1733	600	3713
290	1795	610	3775
300	1857	620	3837
310	1918	630	3899
320	1980	640	3961
330	2042	650	4023
340	2104	660	4084
350	2166	670	4146
360	2228	680	4208
370	2290	690	4270
380	2352	700	4332

JHM08 Square Drive Wrench Torque Chart

Pressure (Bar)	Torque (Nm)	Pressure (Bar)	Torque (Nm)
70	742	390	4134
80	848	400	4240
90	954	410	4346
100	1060	420	4452
110	1166	430	4558
120	1272	440	4664
130	1378	450	4770
140	1484	460	4876
150	1590	470	4982
160	1696	480	5088
170	1802	490	5194
180	1908	500	5300
190	2014	510	5406
200	2120	520	5512
210	2226	530	5618
220	2332	540	5724
230	2438	550	5830
240	2544	560	5936
250	2650	570	6042
260	2756	580	6148
270	2862	590	6254
280	2968	600	6360
290	3074	610	6466
300	3180	620	6572
310	3286	630	6678
320	3392	640	6784
330	3498	650	6890
340	3604	660	6996
350	3710	670	7102
360	3816	680	7208
370	3922	690	7314
380	4028	700	7420

JHM10 Square Drive Wrench Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	1015	390	5723
80	1160	400	5870
90	1305	410	6050
100	1450	420	6197
110	1584	430	6345
120	1728	440	6492
130	1872	450	6640
140	2016	460	6787
150	2160	470	6935
160	2304	480	7082
170	2448	490	7230
180	2592	500	7378
190	2736	510	7599
200	2880	520	7748
210	3045	530	7897
220	3190	540	8046
230	3335	550	8195
240	3480	560	8344
250	3625	570	8493
260	3770	580	8642
270	3915	590	8791
280	4060	600	8940
290	4205	610	9089
300	4350	620	9238
310	4549	630	9387
320	4696	640	9536
330	4843	650	9685
340	4990	660	9834
350	5136	670	9983
360	5283	680	10132
370	5430	690	10281
380	5577	700	10430

JHM16 Square Drive Wrench Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	1509	390	8527
80	1724	400	8746
90	1940	410	8964
100	2155	420	9182
110	2373	430	9401
120	2591	440	9619
130	2810	450	9837
140	3028	460	10054
150	3246	470	10271
160	3468	480	10488
170	3690	490	10705
180	3913	500	10922
190	4135	510	11134
200	4357	520	11345
210	4576	530	11557
220	4796	540	11768
230	5015	550	11980
240	5235	560	12189
250	5454	570	12398
260	5675	580	12607
270	5896	590	12816
280	6116	600	13025
290	6337	610	13237
300	6558	620	13449
310	6776	630	13660
320	6994	640	13872
330	7213	650	14084
340	7431	660	14285
350	7649	670	14486
360	7868	680	14688
370	8088	690	14889
380	8307	700	15090

JHM20 Square Drive Wrench Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	1940	390	10538
80	2218	400	10785
90	2495	410	11064
100	2772	420	11343
110	3040	430	11623
120	3307	440	11902
130	3575	450	12181
140	3842	460	12527
150	4110	470	12872
160	4378	480	13218
170	4645	490	13563
180	4913	500	13909
190	5180	510	14158
200	5448	520	14407
210	5739	530	14657
220	6030	540	14906
230	6320	550	15155
240	6611	560	15414
250	6902	570	15672
260	7164	580	15931
270	7427	590	16189
280	7689	600	16448
290	7952	610	16726
300	8214	620	17004
310	8481	630	17281
320	8749	640	17559
330	9016	650	17837
340	9284	660	18151
350	9551	670	18466
360	9798	680	18780
370	10045	690	19095
380	10291	700	19409

Square Drive Wrench JHM28 Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	2504	390	14602
80	2862	400	14993
90	3219	410	15362
100	3577	420	15731
110	3938	430	16099
120	4299	440	16468
130	4661	450	16837
140	5022	460	17221
150	5383	470	17606
160	5778	480	17990
170	6173	490	18375
180	6567	500	18759
190	6962	510	19143
200	7357	520	19528
210	7737	530	19912
220	8118	540	20297
230	8498	550	20681
240	8879	560	21065
250	9259	570	21450
260	9656	580	21834
270	10054	590	22219
280	10451	600	22603
290	10849	610	22987
300	11246	620	23372
310	11604	630	23756
320	11963	640	24141
330	12321	650	24525
340	12680	660	24909
350	13038	670	25294
360	13429	680	25678
370	13820	690	26063
380	14211	700	26447

Square Drive wrench JHM36 Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	3309	390	19324
80	3782	400	19818
90	4254	410	20312
100	4727	420	20805
110	5245	430	21299
120	5763	440	21792
130	6282	450	22286
140	6800	460	22780
150	7318	470	23273
160	7817	480	23767
170	8315	490	24260
180	8814	500	24754
190	9312	510	25248
200	9811	520	25741
210	10319	530	26235
220	10827	540	26728
230	11334	550	27222
240	11842	560	27716
250	12350	570	28209
260	12879	580	28703
270	13407	590	29196
280	13936	600	29690
290	14464	610	30184
300	14993	620	30677
310	15464	630	31171
320	15936	640	31664
330	16407	650	32158
340	16879	660	32652
350	17350	670	33145
360	17844	680	33639
370	18337	690	34132
380	18831	700	34626

Square Drive Wrench JHM50 Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	4741	390	26417
80	5419	400	27094
90	6096	410	27771
100	6773	420	28449
110	7451	430	29126
120	8128	440	29803
130	8806	450	30481
140	9483	460	31158
150	10160	470	31835
160	10838	480	32513
170	11515	490	33190
180	12192	500	33867
190	12870	510	34545
200	13547	520	35222
210	14224	530	35899
220	14902	540	36577
230	15579	550	37254
240	16256	560	37931
250	16934	570	38609
260	17611	580	39286
270	18288	590	39963
280	18966	600	40641
290	19643	610	41318
300	20320	620	41995
310	20998	630	42673
320	21675	640	43350
330	22352	650	44028
340	23030	660	44705
350	23707	670	45382
360	24384	680	46060
370	25062	690	46737
380	25739	700	47414

Square Drive Wrench JHM70 Torque chart

Pressure (bar)	Torque (Nm)	Pressure (bar)	Torque (Nm)
70	6925	390	38580
80	7914	400	39570
90	8903	410	40559
100	9892	420	41548
110	10882	430	42537
120	11871	440	43527
130	12860	450	44516
140	13849	460	45505
150	14839	470	46494
160	15828	480	47484
170	16817	490	48473
180	17806	500	49462
190	18796	510	50451
200	19785	520	51440
210	20774	530	52430
220	21763	540	53419
230	22753	550	54408
240	23742	560	55397
250	24731	570	56387
260	25720	580	57376
270	26709	590	58365
280	27699	600	59354
290	28688	610	60344
300	29677	620	61333
310	30666	630	62322
320	31656	640	63311
330	32645	650	64301
340	33634	660	65290
350	34623	670	66279
360	35613	680	67268
370	36602	690	68258
380	37591	700	69247